

INSTRUCTION MANUAL

HEATED ELECTRIC BOTTLE

SKUDDE

1849357



How to use

1. Connect to a 5V USB power port, the indicator light will flash three colors and then go off
2. To turn on the heating pad, long press the control button until the indicator light turns solid red, this means the high-level heating mode is on.
3. Pressing the control button again will switch to mid-level heating mode and the indicator light will switch to solid blue.
4. Pressing the control button once more will switch to low heating mode and the indicator light will turn solid green.
5. The heating pad will automatically turn off after 45 minutes of being on by default, if you want to turn it off manually, long press the control button until the indicator light goes off


Control button




Control button

 Red light
High level
(55-60°C)

 Blue light
Medium level
(45-50°C)

 Green light
Low level
(25-40°C)

 No indicator
light on
(Turn off)

Content of the package

- 1 Cushion with integral USB cable
- 1 Outer cover
- 1 Instruction manual

Details

- 3 Heating levels
- Input: 5.0 V – 2.0 A
- Functions with supplied cable
- Outer cover: 5% Wool + 95% Polyester

45 minutes auto-off feature

To avoid risks like burns, we set the heating pad to auto-off after 45 minutes of working, if you want to continue using it, just turn it on again.

Trouble shooting

Indicator status	Meaning
Solid red	High-level heating mode, 55-60°C
Solid blue	Medium-level heating mode, 45-50°C
Solid green	Low-level heating mode, 25-40°C
Flashing red or blue or green	<ul style="list-style-type: none"> ▪ Input power is too low to heat. ▪ Follow these steps to solve it: <ol style="list-style-type: none"> 1. Disconnect the pad from the power supply. 2. Connect the USB interface to a USB plug (not included) and plug it into a wall plug-in power supply. 3. Long press the control button to turn it on.
Flashing red then off	
Flashing blue then off	
Flashing green then off	
No matter how many times you press the control button, it flashes red, blue and green alternately and then goes off	

Safety instructions

This appliance can be used by children aged 8 and above and by people having reduced physical, sensory or mental capacity or a lack of experience or knowledge, as long as these users are supervised or have been informed how to use the appliance safely and understand the risk they undertake. Children must not play with the appliance. Cleaning and maintenance by the user must not be done by unsupervised children. Use the product only as indicated in these instructions. Do not use accessories other than those supplied with the device. Before plugging-in the device, check that the device voltage corresponds to the mains voltage. Always switch off the power before installing anything. For home use only. The power cord cannot be replaced. If the power cord is damaged, it must be replaced by the manufacturer, their after-sales service or similarly qualified technicians in order to avoid risk of danger. Never attempt to repair the appliance yourself. Do not take this product apart.

Import instructions. Retain for future reference.

For continuous use of the device, we recommended using it on the lowest heating level. When there is the possibility that the device may be used for a prolonged time, for example by a user who falls asleep, please note that:

- The settings are adjustable to those recommended for continual use.
- When the device is not being used, store it as indicated.
- When the device is about to be stored, leave it to cool down before folding it.
- Do not make creases on the device by placing objects on the top of it while it is stored.
- Examine the device frequently to detect any sign of wear or deterioration. If these signs are observed, if the device has been used in an incorrect manner, or if it is not working, return it to the supplier before reusing it.
- This appliance should not be used by people who cannot feel heat, or by vulnerable people who are incapable of reacting to overheating.
- Children under the age of three should not use this device due to their inability to react in the event of overheating.

The cable and control unit may pose risk of entanglement, strangulation, tripping or trampling if they are not correctly positioned. The user should check that the connectors and excess electrical wires are positioned in a safe way.

Cleaning and care

Interior cushion (heating part):

- Do not get wet
- Do not bleach
- Do not tumble dry
- Do not iron
- Do not dry clean

Outer cover

- Washable at 30
- Do not bleach
- Do not tumble dry
- Do not iron
- Do not dry clean

After each use, store in a cool, dark place.